

### Note


#### Dome lamp, rear, 1st version

A double detent switch for rear dome lamp is mounted at the front on switch console.

The dome lamp can be engaged directly by means of upper detent switch (1).

The lower detent switch (2) connects or interrupts the ground connection line between rear door contact switch and dome lamp rear. As a result, the dome lamp can be switched off when the backdoor is opened.


Switch 1st version

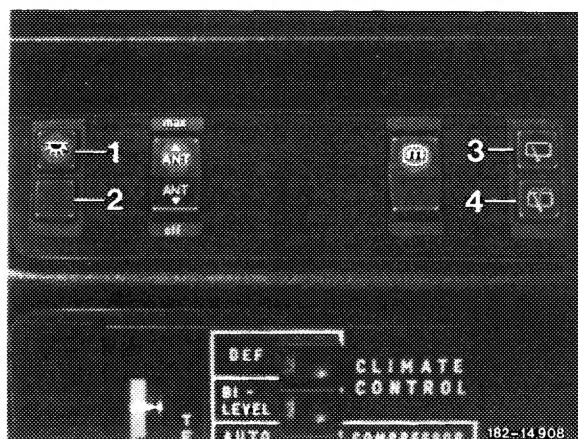

#### Dome lamp, rear, 2nd version


The dome lamp can be switched off and on by means of switch in dome lamp.

Depending on position of switch in dome lamp, the lamp is switched on and off by the contact switches of the rear doors and the backdoor (fifth door).

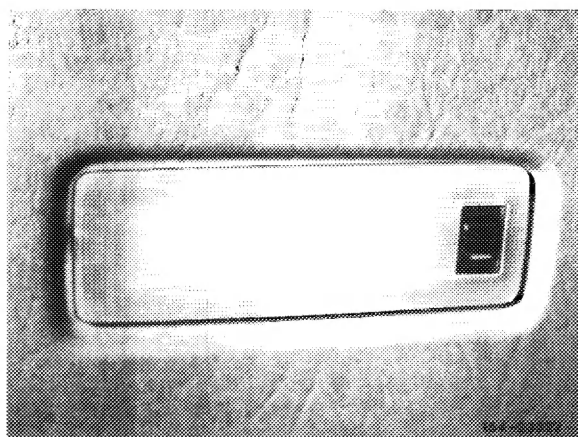

#### Removing rear dome lamp


Push down holding spring on righthand side of dome lamp by means of a small screwdriver and remove dome lamp to the right.

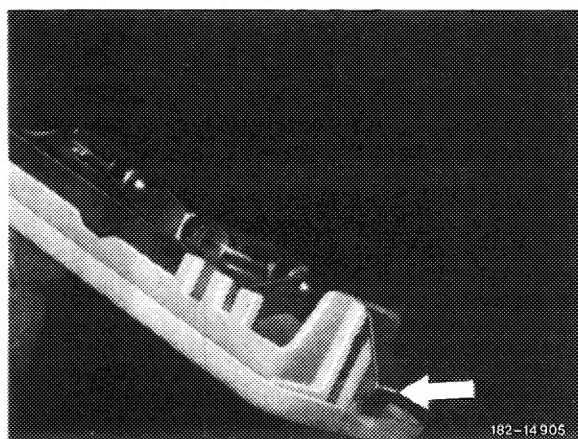


## Removing backdoor contact switch

---

**Note:** Remove backdoor lock for renewing backdoor contact switch.

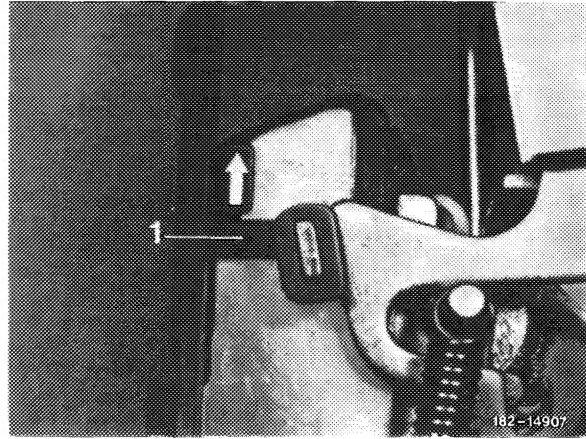

Slide backdoor contact switch on removed backdoor lock in direction of arrow, slightly pushing down detent cam (1).

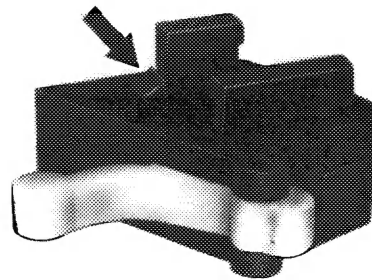

Removed backdoor contact switch

182-14899